



Flush-Mount • DR-FM

Installation Instructions

1053121A • June 2005
Copyright © 2005, GE Security Inc.


Introduction

This is the GE *Flush-Mount Installation Instructions* for model DR-FM.

Installation

To flush-mount the housing, see *Figure 1*:

Figure 1. Flush-mounting the housing

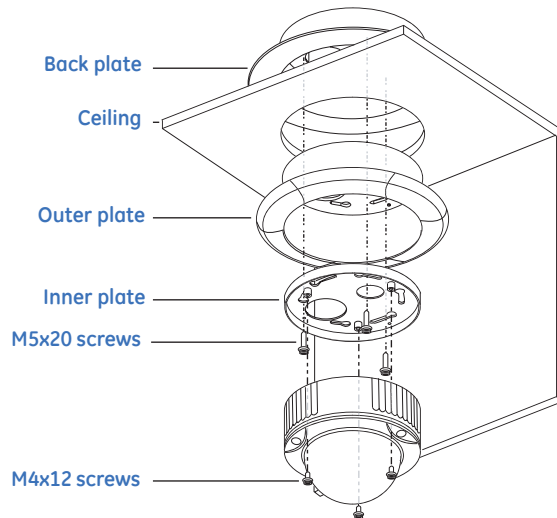

Note: Feed the cables through the ceiling panel, plates, and housing at the appropriate time depending on whether you are using the flying lead and whether the cable is external or internal to the mounting surface.

Preparation

To prepare the ceiling panel, do the following:

1. Remove the ceiling panel from the ceiling.
2. Position the back outer plate on the ceiling panel at the installation location.

Note: Ensure that you trace the back of the outer plate: This is the side with the smaller diameter. If you trace the diameter of the front of the plate, your mounting hole will be too large.

3. Trace the outline of the back of the outer plate onto the ceiling panel.
4. Use the traced outline as a guide to cut out the mounting hole.

Mounting plate installation

To install the back and outer plates, do the following:

1. From the inside of the back plate, insert the three M5x20 pan-head double-washer screws into the three holes.
Note: The screws should be secure, but they should not protrude out the back of the plate.
2. Set the back plate onto the back of the ceiling panel and center it over the mounting hole.
3. Slide the outer plate into the mounting hole and back plate.
4. Line up the mounting holes and slots in the outer plate with the three M5x20 pan-head double-washer screws in the back plate.
5. Slide the outer plate onto the screws in the back plate.
6. Rotate the outer plate counterclockwise to secure it to the back plate.

Housing installation

To install the housing, do the following:

1. Let the housing cover drop down and rest on the hinge.
2. Attach the housing to the inner plate using the M4x12 pan-head double-washer screws.
3. Slide the back of the housing and attached inner plate into the outer plate.
4. Rotate the housing counterclockwise to slide the mounting slots on the inner plate onto the screws in the back plate.

Technical support

Toll-free: 888.GESECURity (888.437.3287 in the US, including Alaska and Hawaii; Puerto Rico; Canada).
Outside the toll-free area: Contact your local dealer.

www.gesecurity.com