


2X-AT Series Quick Operation Guide

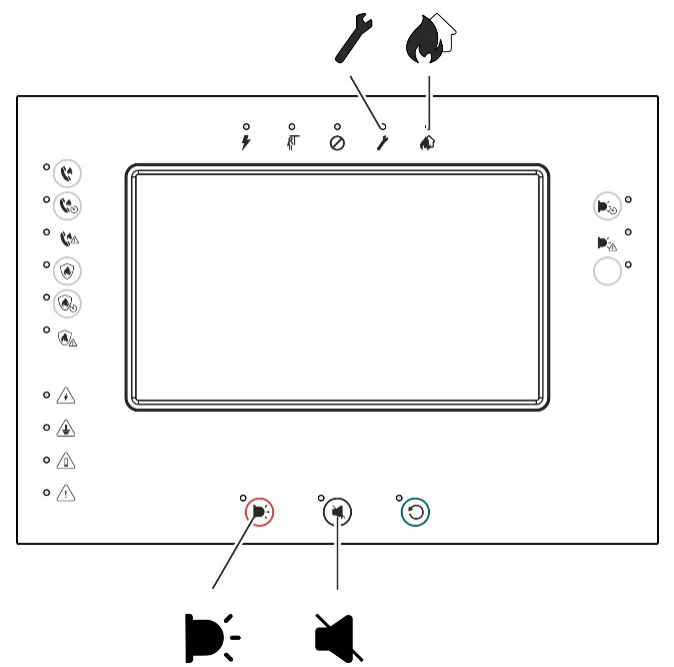

Icon	Description
	Fire Alarm LED
	Fault LED
	Sounder Start/Stop button and LED
	Panel Silence button and LED

If you hear the buzzer

Determine the cause of the buzzer

WARNING: Depending on your fire alarm system configuration, the buzzer may be your first indication of a fire alarm.

If the buzzer is sounding and the LED is flashing or steady, then it's a fire alarm.


If the buzzer is sounding and the LED is steady, then it's a fault.

For a fire alarm

1. Determine the location of the fire

Check the location of the fire. The touchscreen displays information from the first and last zones to report an alarm.

Figure 1: Alarm location

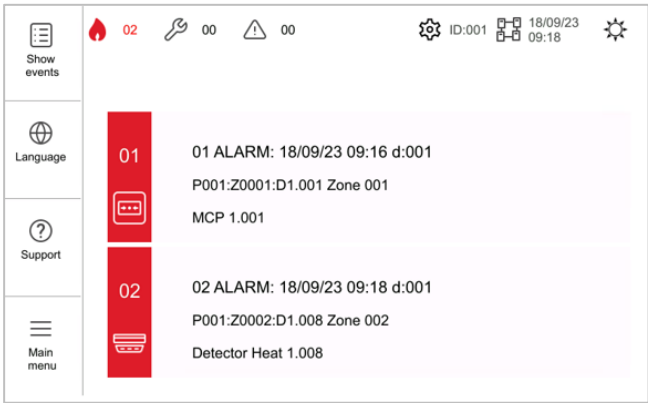

Alarm location details are indicated as follows.

Letter	Description	Alarm 01	Alarm 02
d	Number of devices in alarm	d:001	d:001
P	Control panel ID	P001	P001
Z	Zone	Z0001	Z0002
D	Loop and device	D1:001	D1.008

In alarm 01 in Figure 1 (P001:Z0001:D1.001), an alarm has been activated by device 001 on loop 1 in zone 1 on control panel 001. One device is in alarm in the corresponding zone.

In alarm 02 in Figure 1 (P001:Z0002:D1.008), an alarm has been activated by device 008 on loop 1 in zone 2 on control panel 001. One device is in alarm in the corresponding zone.

2. Determine the source of the fire alarm

The following icons indicate the source of the fire alarm.

	Detector alarm. If the LED is flashing and the detector icon is displayed, then the system has detected a detector alarm (see alarm 02 in Figure 1).
	Manual call point alarm. If the LED is steady, and the manual call point icon is displayed, then the system has detected a manual call point alarm (see alarm 01 in Figure 1).

3. Verify the fire alarm

If necessary, investigate the location of the fire alarm to confirm that the alarm is genuine.

Depending on the configuration of your fire alarm system, you may have up to ten minutes to investigate the alarm before sounders and other alarm notification devices are activated.

4. Activate the sounders

If the fire alarm is verified, do either of the following to activate the sounders and other alarm notification devices immediately:

Break the nearest manual call point.

— or —

Press the  button on the control panel.

5. Leave the building

Once the fire alarm has been confirmed and the fire alarm activated, leave the building and follow your company's evacuation drill.

For a fault

1. Silence the buzzer

To silence the buzzer, press the  button on the control panel.

The  LED turns on and the buzzer stops. New alarm or fault events will turn the buzzer back on.

Caution: Always confirm the cause of the warning signal before silencing the buzzer.

Additional information on the fault is available by tapping Show Events.

2. Contact your maintenance contractor

Contact your maintenance contractor immediately to investigate and repair the fault.

Other options

Viewing current event information

To view current event information, tap Show Events and then select the event type to view.

The event types available to this user level are:

- Alarms
- Alerts
- Faults
- Conditions

Conditions include all other system events. Examples: tests and disablements in the fire system.

Viewing support information

To view support information configured by your installation or maintenance contractor, tap Support. Your installer or maintenance contractor may configure different messages to display in alarm and nonalarm situations.

Note: This information is only available if your installation or maintenance contractor has added information to the fire system configuration.

For more information

This document includes basic control panel operation instructions to be followed in the event of a fire alarm or fault indication. For detailed operation, refer to the operation manual.

Maintenance information

Inspect and test the fire alarm system in accordance with all applicable requirements and regulations.

For service contact:

Name:

Address:

Telephone:

Contact information and product documentation

For contact information or to download the latest product documentation, visit firesecurityproducts.com.

Product warnings and disclaimers

THESE PRODUCTS ARE INTENDED FOR SALE TO AND INSTALLATION BY QUALIFIED PROFESSIONALS. CARRIER FIRE & SECURITY B.V. CANNOT PROVIDE ANY ASSURANCE THAT ANY PERSON OR ENTITY BUYING ITS PRODUCTS, INCLUDING ANY "AUTHORIZED DEALER" OR "AUTHORIZED RESELLER", IS PROPERLY TRAINED OR EXPERIENCED TO CORRECTLY INSTALL FIRE AND SECURITY RELATED PRODUCTS.

For more information on warranty disclaimers and product safety information, please check <https://firesecurityproducts.com/policy/product-warning/> or scan the QR code:

