


NC Series Conventional Fire Alarm Control Panel Quick Operation Guide

Figure 1: Control panel user interface

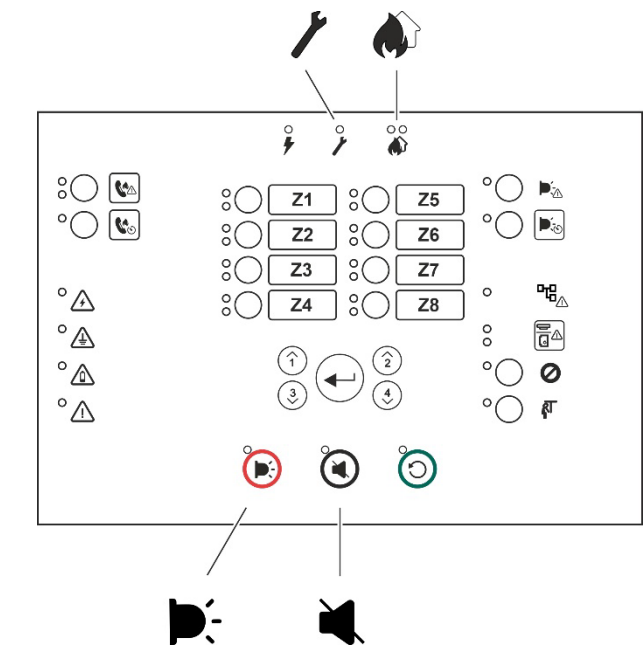

Icon	Description
	Fire Alarm LEDs
	Fault LED
	Sounder Start/Stop button and LED
	Panel Silence button and LED
Z1-Z8	Zone Alarm LEDs [1]

[1] Some control panels only have 2 or 4 zones.

If you hear the buzzer

Determine the cause of the buzzer

WARNING: Depending on your fire alarm system configuration, the buzzer may be your first indication of a fire alarm.

If the buzzer is sounding and the red LEDs are flashing or steady, then it's a fire alarm.

If the buzzer is sounding and the yellow LED is steady, then it's a fault.

For a fire alarm

1. Determine the location of the fire

Check the location of the fire, indicated by the red Zone Alarm LED.

If the and Zone Alarm LEDs are flashing, the fire alarm has been activated by a detector. If they are steady, the fire alarm has been activated by a manual call point.

2. Verify the fire alarm

If necessary, investigate the location of the fire alarm to confirm that the alarm is genuine.

Depending on the configuration of your fire alarm system, you may have up to ten minutes to investigate the alarm before sounders and other alarm notification devices are activated.

3. Activate the sounders

If the fire alarm is verified, do either of the following to activate the sounders and other alarm notification devices immediately:

Break the nearest manual call point.

— or —

Press the button on the control panel. (This requires operator user level access.)

4. Leave the building

Once the fire alarm has been confirmed and the fire alarm activated, leave the building and follow your company's evacuation drill.

For a fault

WARNING: Never silence the buzzer without first investigating the cause of the warning signal.

1. Silence the buzzer

To silence the buzzer, press the button on the control panel.

The yellow LED turns on and the buzzer stops. New alarm or fault events will turn the buzzer back on.

2. Contact your maintenance contractor

Contact your maintenance contractor immediately to investigate and repair the fault.

For more information

This document includes basic control panel operation instructions to be followed in the event of a fire alarm or fault indication. For detailed operation, refer to the operation manual.

Maintenance information

Inspect and test the fire alarm system in accordance with all applicable requirements and regulations.

For service contact:

Name: _____

Address: _____

Telephone: _____

Contact information and product documentation

For contact information or to download the latest product documentation, visit firesecurityproducts.com.

Product warnings and disclaimers

THESE PRODUCTS ARE INTENDED FOR SALE TO AND INSTALLATION BY QUALIFIED PROFESSIONALS. CARRIER FIRE & SECURITY B.V. CANNOT PROVIDE ANY ASSURANCE THAT ANY PERSON OR ENTITY BUYING ITS PRODUCTS, INCLUDING ANY "AUTHORIZED DEALER" OR "AUTHORIZED RESELLER", IS PROPERLY TRAINED OR EXPERIENCED TO CORRECTLY INSTALL FIRE AND SECURITY RELATED PRODUCTS.

For more information on warranty disclaimers and product safety information, please check <https://firesecurityproducts.com/policy/product-warning/> or scan the QR code:

